

MAXLOADC&H[®]

ELECTRIC CHAIN HOIST

MANUAL BOOK V19.07

For

INSTALLATION & OPERATION & SERVICE

(ORIGINAL)

SHANGHAI MAXLOAD CRANES & HOISTS CO., LTD.

Add: 5588-1718th, Caoan Road, Jiading Distict, Shanghai China.

Tel: 0086 (021)5999 9072 **Phone:** 0086 156 1824 5535

Mail: market@chnhoist.com **Web:** www.chnhoist.com

Mail: market@chnhoist.com

Web:www.chnhoist.com

Contents

■Preface	3
■Safty Attentions	4
Chapter 1 Operation method	4
Chapter 2 Regular inspection	6
Chapter 3 Problems and solvements	14

■ Disclaimers

- We do not undertake any responsibility for the damages caused by fire, earthquake, lightning or other natural disasters, acts of third parties, accidents, the user's intent, negligence or misuse, or other damages from the conditions beyond the useage environments.
- We do not undertake any responsibility for the collateral damages caused by using this product or cannot put into use, such as the loss of business interests, business interruption, damage to lifting loads, etc.).
- We do not undertake any responsibility for the damages caused by non-compliance with the contents of the operating manuals or beyond the specified scope.
- Not involved with the company due to a mechanical malfunction caused by the combination of such damages arise, the Company does not undertake any responsibility.

■ Use restrictions


- Do not move for the transportation of persons, as this product is not designed and produced as a manned transport products.
- Please do not use outside of the designing occasion, the products is designed under the purposes of load up and down, horizontal loading and unloading in normal use environment.
- Do not use this product as parts of a non-mechanical devices with moving loads.

■ Operation and use


- Pls read carefully of this operating manual and other user manuals, understand the whole contents before you operation and use our products.
- Pls wear protective clothing and appliance before operator operation and use our products.

■ Safety precautions

- Operate any kind of lifting equipment may have caused the potential risk of loss of personnel or property.
- Dangerous substantial increase in the chance of the operators don't follow the correct operation mode and precautions. So as to ensure safe operation, before you start to use our product, each operator should be fully familiar with the description of the contents of all manuals and precautions.

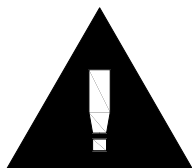

When there appears warning symbles like the beside ones show in this frame in the manuals contents, and these contents have been bordered, it means these text are very important safty instructions or precautions. The operators have to be sure to fully comply with the instructions, otherwise it is likely to endanger you or other people's lives and property. Therefore, pls read carefully of our operation manuals and precautions before you use our electric chain hoists.

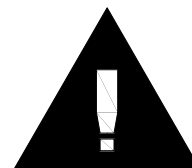

■ Preface

The contents covered in this manual can help you with correct installation, operation and maintenance of our electric chain hoists and let your hoists operated in the best safety, efficiency and economy.

Pls thoroughly study on our manual contents, correct process, operation modes and preventative maintenances before you use our hoists, you will get practical and reliable services.

In order to provide you with the necessary replacement parts in a fastest time, pls kindly supply us with the following information when you get in touch with us:

- (1) Model type
- (2) Product serial Number
- (3) Name of parts which need to be replaced (It is better to enclose with explains)

You will find out that OUR electric chain hoists will offer you with many years various and satisfied services.

Whenever you have any doubts, pls do not hesitate to contact with us:



(Dealer's stamp)

■ Safty attentions

Chapter 1 Operational methods

1. Main specification

Specification chart

Suitable for all kinds of our electric chain hoists

1-1

Item		Specs	
Operating temperature range (°C)		-20 to +40	
Operating humidity range (%)		85 or below	
Protection class	Hoist	IP54	
	Button switch	IP54	
Power		3 phases, 200~600V, 50/60HZ	
Noise level (dB)	Single speed hoist	81	
	Double speed hoist	81	
Chain specs	Working load limit	Diameter (mm)	Chain pitch (mm)
	0.3, 0.5	∅ 6.3	19
	1t, 2t, 3t	∅ 7.1	21
	1.5t, 2t	∅ 10.0	30
	2.5t, 3t, 5t, 7.5t, 10t, 15t, 25t	∅ 11.2	34

Remarks: (1) When the operating temperature and humidity is beyond the above table, pls get in touch with our agency for more details.

(2) Expected usage: our hoists are designed to lift up and down under the common atmospheric and working conditions.

(3) The noise level is measured under the normal level of one meter from the hoist working place where the hoists is proceeding with standard operation.


Mechanical level and service life

The guarantee of the service life and safety for electric chain hoists is based on the operator strictly follows below operation levels.

Our electric chain hoists are designed to be 1Am level in FEM standards (FEM 9.511)

The average of the daily operation hours and total operation hours is calculated by load distribution.

Load level	Definition	Cubic value	Average daily operation hours(hours)					
1 (light)	The mechanism and parts are frequently under light load, and there is no max load unless exceptional conditions.	$K \leq 0.50$	≤ 2	2-4	4-8	8-16	≤ 16	>16
2 (medium)	The mechanism and parts are frequently under light load, but also under max load with low frequency.	$0.50 < k \leq 0.63$	≤ 1	1-2	2-4	4-8	8-16	≤ 16
3 (heavy)	The mechanism and parts are frequently under medium and heavy load.	$0.63 < k \leq 0.80$	≤ 0.5	0.5-1	1-2	2-4	4-8	8-16
4 (overweight)	The mechanism and parts are frequently under max or almost reach to max load.	$0.80 < k \leq 1.00$	≤ 0.25	0.25-0.5	0.5-1	1-2	2-4	4-8
			1Bm	1Am	2m	3m	4m	5m

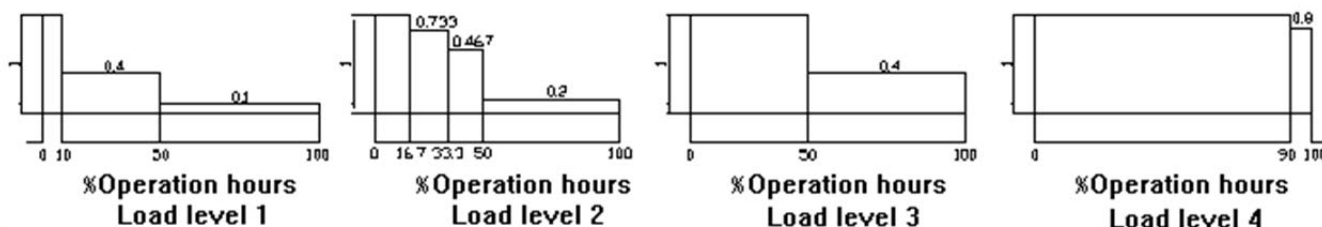



Basis of selecting motors for lifting equipments

Group		Intermittent Service			Short-Time service
F.E.M	ISO	Cycles/h	Starts/h	(ED%)	Operation period min
1 DM	M1	15	90	15	7.5
1 CM	M2	20	120	20	7.5
1 BM	M3	25	250	25	15
1 AM	M4	30	180	30	15
2 M	M5	40	240	40	30
3 M	M6	50	300	50	30
4 M	M7	60	360	60	60
5 M	M8	60	360	60	>60






Chapter 2 Periodic inspection

2. Periodic inspection


Daily inspection on electric chain hoists

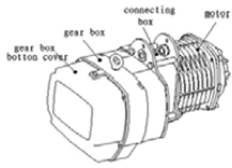Items	Inspection ways	Standards	Resolutions to deviations
Marks such as nameplates, labels etc.		 <ul style="list-style-type: none"> ● No peeling and clear marks. 	Proceed with cleaning, repairing and replacing. Pls mark the serial number for replacing.
The deformation or damage of body parts	<ul style="list-style-type: none"> · Visual check 	<ul style="list-style-type: none"> ● No remarkable deformation, damage, defect and chap. 	Replace the parts which are deformation, damage, defect and chap
Bolts,nuts and cutters'loosing or falling off	<ul style="list-style-type: none"> ● Visual and using tools check 	<ul style="list-style-type: none"> ● Practical and reliable installation. <p>Even an tiny bolt, when it is loosing it will cause the whole equipment falling down.</p> <p>Therefore pls make sure the precise installations.</p> <p>Otherwise it will lead to death or serious injury etc.</p>	Precise installation



ELECTRIC CHAIN HOIST

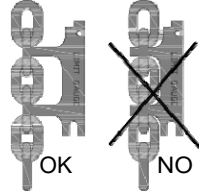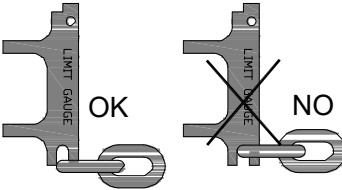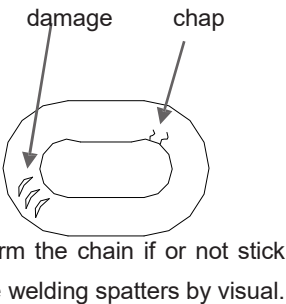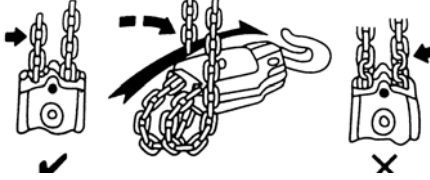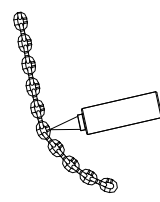Items	Inspection ways	Standards	Resolutions to deviations
Extend of pitch	<ul style="list-style-type: none"> Check by chain measurement tool 		
Attrition of chain diameters	<ul style="list-style-type: none"> Check by chain measurement tool 		
Deformation, Damage, wind	<ul style="list-style-type: none"> Visual check 	<ul style="list-style-type: none"> No deep cut. No deformation. No welding spatters. No wind. No chap. 	Replace load chains
Rust and corrosion	<ul style="list-style-type: none"> Visual check 	<ul style="list-style-type: none"> No remarkable rust and corrosion. 	Replace load chains
Distortion	<ul style="list-style-type: none"> Visual check 	<ul style="list-style-type: none"> No distortion due to bottom block roll over of double chain models. 	Correct distortion
Oil supply	<ul style="list-style-type: none"> Visual check 	<ul style="list-style-type: none"> Adequate supply of oil. 	Oiling

ELECTRIC CHAIN HOIST

Items	Inspection ways	Standards	Resolutions to deviations																																																																		
Limit switch	Check by pushing button	Keep operating until upper and lower limit where motor shutdown automatically.	Replace limit switch, Disassemble and clean the limit lever																																																																		
Movement confirmation	Check by pushing button	<ul style="list-style-type: none"> • Load chain can roll up easily. • Move towards the same direction to the button's. • Motor shutdown immediately when stop operating. • All movements shutdown when push the E-stop button. • Push any other buttons can't cause any moves when pushing the E-stop button. • All movements back to normal operation when relieve the E-STOP button. 																																																																			
Brake	Check by pushing button	<ul style="list-style-type: none"> • Brake quickly works and bottom hook stop movements immediately when the operation is stopped. <p>(The amount of movement of the load chain is within 2 to 3 rings)</p>																																																																			
Chain spring	Check by visual and measure dimension 	<table border="1"> <thead> <tr> <th rowspan="2">Model</th> <th rowspan="2">Capacity</th> <th colspan="2">Spring length</th> </tr> <tr> <th>Standard</th> <th>Limits</th> </tr> </thead> <tbody> <tr> <td>HHBB0.25-01</td> <td>0.25t</td> <td>145</td> <td>140</td> </tr> <tr> <td>HHBB01-01</td> <td>1t</td> <td>145</td> <td>140</td> </tr> <tr> <td>HHBB02-02</td> <td>2t</td> <td>145</td> <td>140</td> </tr> <tr> <td>HHBB03-03</td> <td>3t</td> <td>145</td> <td>140</td> </tr> <tr> <td>HHBB1.5-01</td> <td>1.5t</td> <td>135</td> <td>129</td> </tr> <tr> <td>HHBB02-01</td> <td>2t</td> <td>135</td> <td>129</td> </tr> <tr> <td>HHBB2.5-01</td> <td>2.5t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB03-01</td> <td>3t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB03-02</td> <td>3t</td> <td>135</td> <td>129</td> </tr> <tr> <td>HHBB05-02</td> <td>5t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB7.5-03</td> <td>7.5t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB10-04</td> <td>10t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB15-06</td> <td>15t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB20-08</td> <td>20t</td> <td>160</td> <td>152</td> </tr> <tr> <td>HHBB25-10</td> <td>25t</td> <td>160</td> <td>152</td> </tr> </tbody> </table>	Model	Capacity	Spring length		Standard	Limits	HHBB0.25-01	0.25t	145	140	HHBB01-01	1t	145	140	HHBB02-02	2t	145	140	HHBB03-03	3t	145	140	HHBB1.5-01	1.5t	135	129	HHBB02-01	2t	135	129	HHBB2.5-01	2.5t	160	152	HHBB03-01	3t	160	152	HHBB03-02	3t	135	129	HHBB05-02	5t	160	152	HHBB7.5-03	7.5t	160	152	HHBB10-04	10t	160	152	HHBB15-06	15t	160	152	HHBB20-08	20t	160	152	HHBB25-10	25t	160	152	Replace chain spring
Model	Capacity	Spring length																																																																			
		Standard	Limits																																																																		
HHBB0.25-01	0.25t	145	140																																																																		
HHBB01-01	1t	145	140																																																																		
HHBB02-02	2t	145	140																																																																		
HHBB03-03	3t	145	140																																																																		
HHBB1.5-01	1.5t	135	129																																																																		
HHBB02-01	2t	135	129																																																																		
HHBB2.5-01	2.5t	160	152																																																																		
HHBB03-01	3t	160	152																																																																		
HHBB03-02	3t	135	129																																																																		
HHBB05-02	5t	160	152																																																																		
HHBB7.5-03	7.5t	160	152																																																																		
HHBB10-04	10t	160	152																																																																		
HHBB15-06	15t	160	152																																																																		
HHBB20-08	20t	160	152																																																																		
HHBB25-10	25t	160	152																																																																		

ELECTRIC CHAIN HOIST

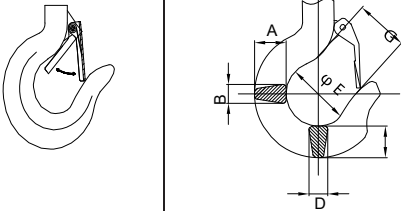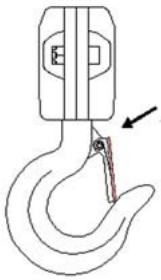Items	Inspection ways	Standards	Resolutions to deviations																																																															
<p>The attrition and opening of the hook</p> 	<p>· Check by visual and vernier caliper</p>	<ul style="list-style-type: none"> • No remarkable open. • No remarkable attrition <table border="1" data-bbox="683 416 1142 810"> <thead> <tr> <th>load</th> <th>a</th> <th>b</th> <th>c</th> <th>d</th> <th>e</th> <th>g</th> </tr> </thead> <tbody> <tr> <td>0.25</td> <td>27</td> <td>18</td> <td>25</td> <td>17</td> <td>35</td> <td>28</td> </tr> <tr> <td>1</td> <td>34</td> <td>24</td> <td>30</td> <td>24</td> <td>42</td> <td>32</td> </tr> <tr> <td>2</td> <td>46</td> <td>29</td> <td>39</td> <td>30</td> <td>49</td> <td>40</td> </tr> <tr> <td>3</td> <td>56</td> <td>35</td> <td>49</td> <td>34</td> <td>59</td> <td>48</td> </tr> <tr> <td>5</td> <td>67</td> <td>43</td> <td>57</td> <td>44</td> <td>60</td> <td>48</td> </tr> <tr> <td>7.5 10</td> <td>82</td> <td>55</td> <td>80</td> <td>48</td> <td>85</td> <td>80</td> </tr> <tr> <td>15</td> <td>110</td> <td>78</td> <td>120</td> <td>80</td> <td>120</td> <td>90</td> </tr> <tr> <td>20 25</td> <td>142</td> <td>95</td> <td>155</td> <td>98</td> <td>150</td> <td>115</td> </tr> </tbody> </table>	load	a	b	c	d	e	g	0.25	27	18	25	17	35	28	1	34	24	30	24	42	32	2	46	29	39	30	49	40	3	56	35	49	34	59	48	5	67	43	57	44	60	48	7.5 10	82	55	80	48	85	80	15	110	78	120	80	120	90	20 25	142	95	155	98	150	115	
load	a	b	c	d	e	g																																																												
0.25	27	18	25	17	35	28																																																												
1	34	24	30	24	42	32																																																												
2	46	29	39	30	49	40																																																												
3	56	35	49	34	59	48																																																												
5	67	43	57	44	60	48																																																												
7.5 10	82	55	80	48	85	80																																																												
15	110	78	120	80	120	90																																																												
20 25	142	95	155	98	150	115																																																												
<p>Deformation, damage and corrosion</p>	<p>• Visual check</p>	<p>• No remarkable deformation, harmful damage and corrosion.</p>	<p>Replace hook</p>																																																															
<p>Hook safety block</p>	<p>• Check by visual and fold and unfold actions</p>	<ul style="list-style-type: none"> • Can exactly fold inside of the hook • No deformation and work flexibly <p style="text-align: center;">Dangerous</p> <ul style="list-style-type: none"> • Don't use the hook which safety block is losing. Otherwise it will lead to death or serious injury accidents. 	<p>Replace hook safety block</p>																																																															
<p>Hook movements (rotate)</p>	<p>• Check by visual and rotate by hands</p> 	<ul style="list-style-type: none"> • No remarkable interspace between bottom supporting and top. • equal at right and left. • easy to rotate 360°. 	<p>Replace hook</p>																																																															

Unpacking


After unpacking, pls careful check over the apparence of the cable, gear box and motor shell.

Check the quantity of the bellowing items as well.

Every set of our hoist should including the below standard spare parts:

1. Chain bag (box)	1pc
2. Control cable	1mtrs
3. Button switch	1pcs

Supply voltage

NOTICE


If the supply voltage exceeds $\pm 10\%$ compare to the standard voltage, operation may cause damage to the motor under this abnormal voltage. Thus operator have to confirm whether the power supply voltage within the operating range of the standard firstly before operating the hoists.

Installations

CAUTIONS


Strictly prohibited connecting to the power before the completion of the installation process.

(1) Chain bag assembly

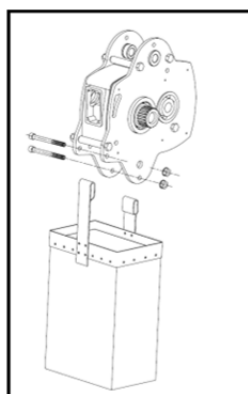



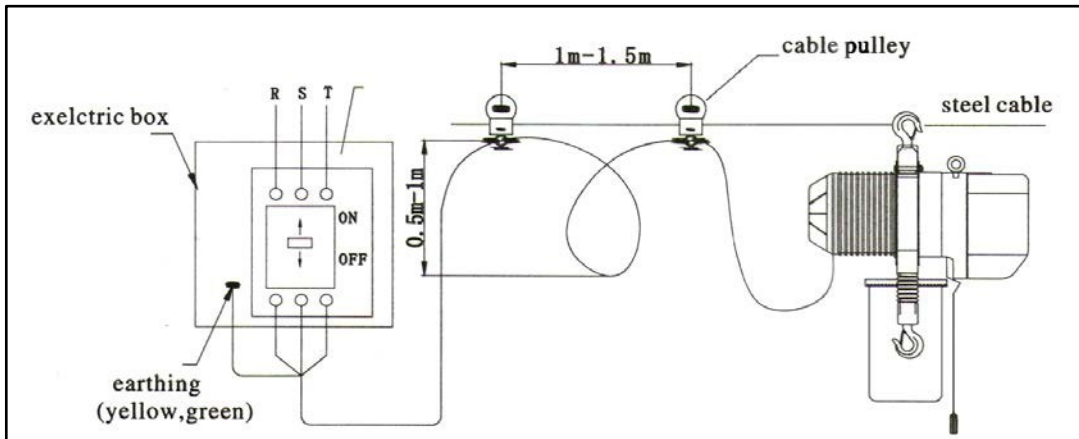

ELECTRIC CHAIN HOIST

(2) Switch on the power supply to the hoist and operate the push button (operated by professional) .




(3) Operation test

- (a) Press the  button indeed, let the hook down until the limit spring touches the limit switch, the motor will stop automatically.
- (b) Press the  button indeed until the chain is collected into the chain bag completely, and the motor stops
- (c) Test the function of the emergency stop switch (if the optional emergency stop switch is purchased) Press  or  button, meanwhile press the emergency stop switch. Check if the hoist stop running immediately or not after press the emergency stop switch, and make sure the hoist can not be started again when press this button. Rotate the emergency stop switch clockwise, make the emergency switch back to the original place. When it bounces back, the hoist can be started again. If any of tests above is failed, please check the distribution circuit and the automatic locking of the emergency switch.
- (c) Check the lubricating condition of load chain (the load chain has been lubricated before delivery, but could be dried when delivery). Any lubricant you have can be used to lubricate the chain. We suggest that infunde a little of lubricant into the chain bag to protect the load chain.
- (e) Check the direction of the chain eyes. All welding points should be of the same direction. The hoist can not be operated properly and utterly unless all welding chain eyes are in the same line.

Installation of the trolley

(1) Install the trolley

- 1) Insert the suspension pin into the lateral plate G and lock it with suspension pin bolts and nuts. 2) Install the suspension pin with adjusting disk.
- 3) Install the suspension pin into the hanger T. The nameplates of hoist and trolley should be in the same direction.
- 4) Install more gaskets into the suspension pin before insert it into the lateral plate S.
- 5) Install the outside adjusting disk and spacerpin into the suspension pin, and insert the cotter pin into the spacerpin. When install the spacerpin, check if the cotter pin can be seen at the left side from the front of the trolley switch box.

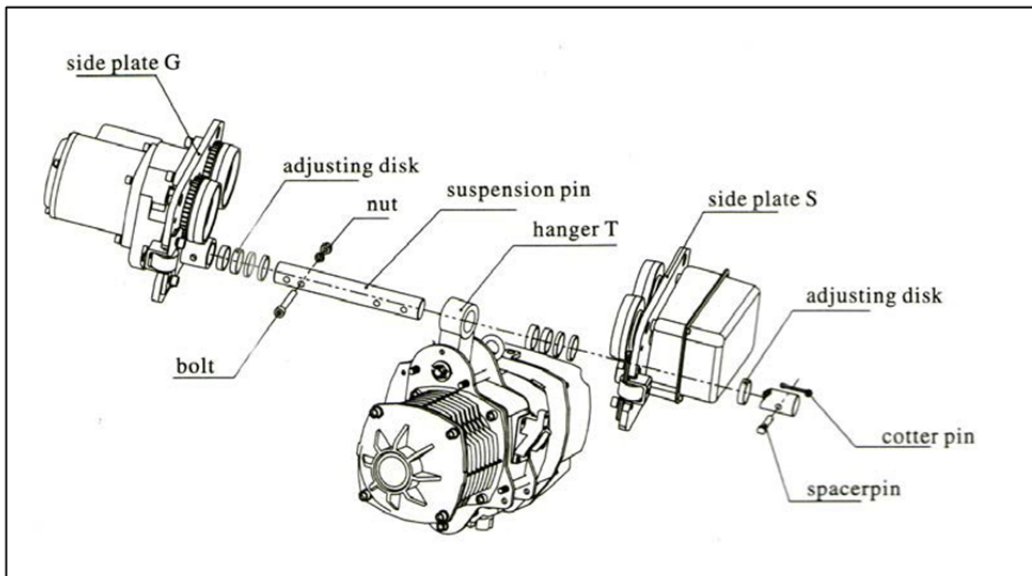


(2) Adjust width of the trolley

Please adjust width of the trolley according to below drawing to get appropriate clearance.

Size A is the dimension when two side plates stretch outside completely.

Size A must be approximate B (the width of rail flange) +4mm.

Please adjust size A by increasing or decreasing adjusting disk. Insert the cotter pin into the spacerpin and bend two branches of cotter pin if the size A is ok.

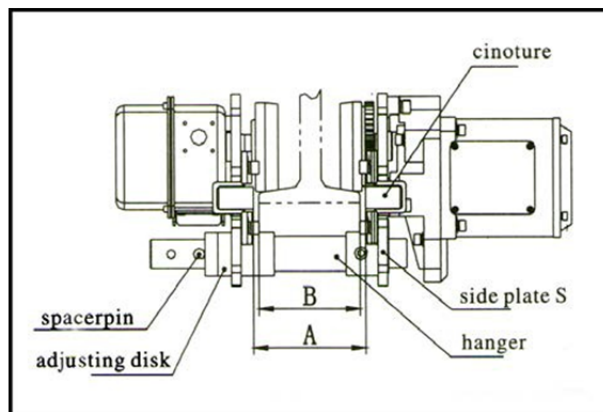

ELECTRIC CHAIN HOIST




WARNING

The nut must be fixed and strong, insert cotter pin and bend it completely.

(3) Install trolley into the beam.

- 1) Install the trolley at the end side of the beam and then slip the trolley which has been connected with hoist already to the appropriate place. This is the most convenient method.
- 2) If first method is unavailable, please follow drawing 5-9.
 - a) Unload the brake stopper from hole A on the suspension pin, and insert it into hole B. Insert cotter pin again and bend it completely.
 - b) Pull the side plate S and G outside then lift the trolley until the orbit wheel and orbit surface is in the same horizontal. Put the orbit wheel of side plate G onto the surface of the orbit.
 - c) Hold the side plate G and stop it from dropping from the orbit. Push side plate S harder and put its orbit wheel onto the surface of the girder.
 - d) Unload the brake stopper from hole B and insert into hole A. Do not forget to bend the cotter pin.

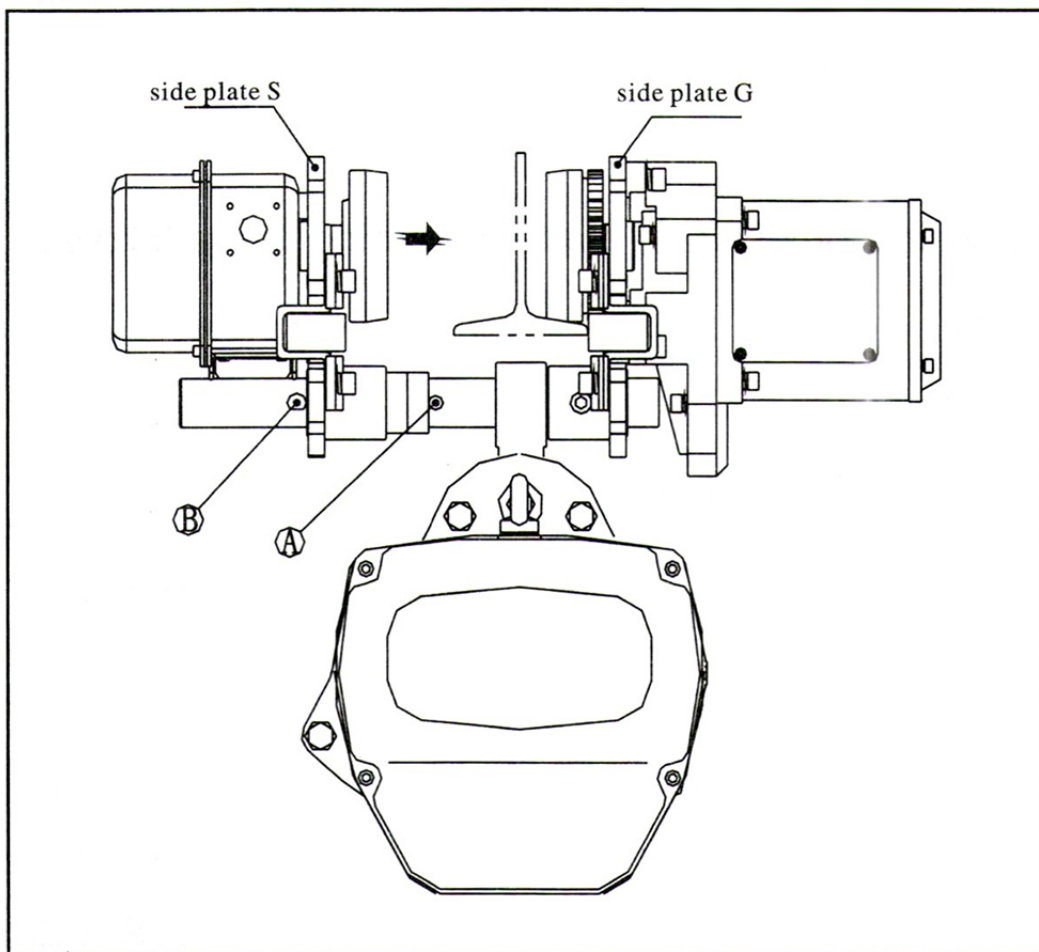

Chapter 3 Reason and Countermeasure of faults

3. Fault Resolution


Wiring Diagram

- (1) 2 directions wiring diagram for single speed ----- 15
- (2) 4 directions wiring diagram for single speed ----- 16
- (3) 6 directions wiring diagram for single speed ----- 17
- (4) 2 directions wiring diagram for double speeds-----18
- (5) 4 directions wiring diagram for double speeds-----19
- (6) 6 directions wiring diagram for double speeds-----20
- (7) wiring diagram for single phase motor----- 21

The above mentioned wiring diagrams above are only for reference, user should take the one inside the electric box as the proper one.


The electric specifications can be made according to the follows:

- (a) 3 phase
- (b) Frequence
- (c) Single or double voltage

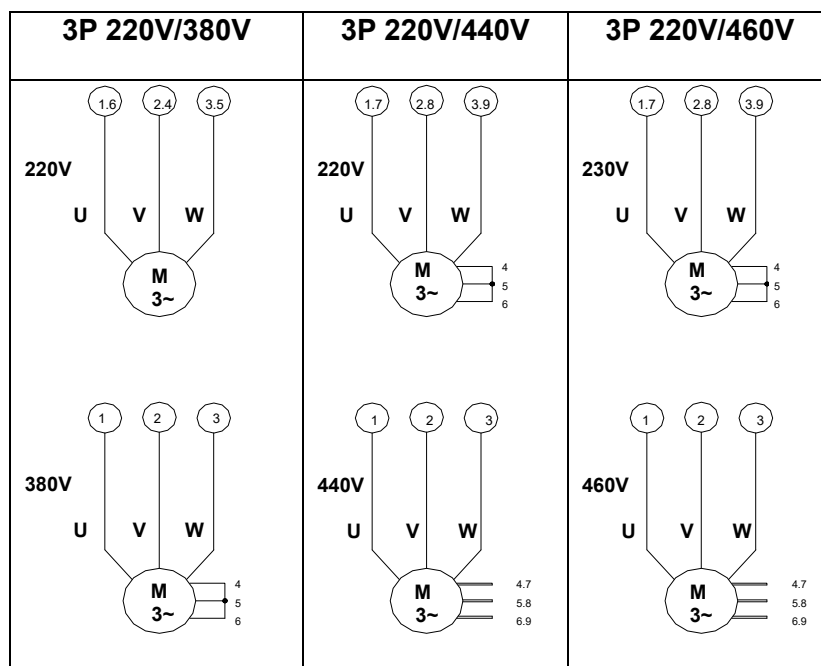


ELECTRIC CHAIN HOIST

(1) 2 directions wiring diagram for single speed

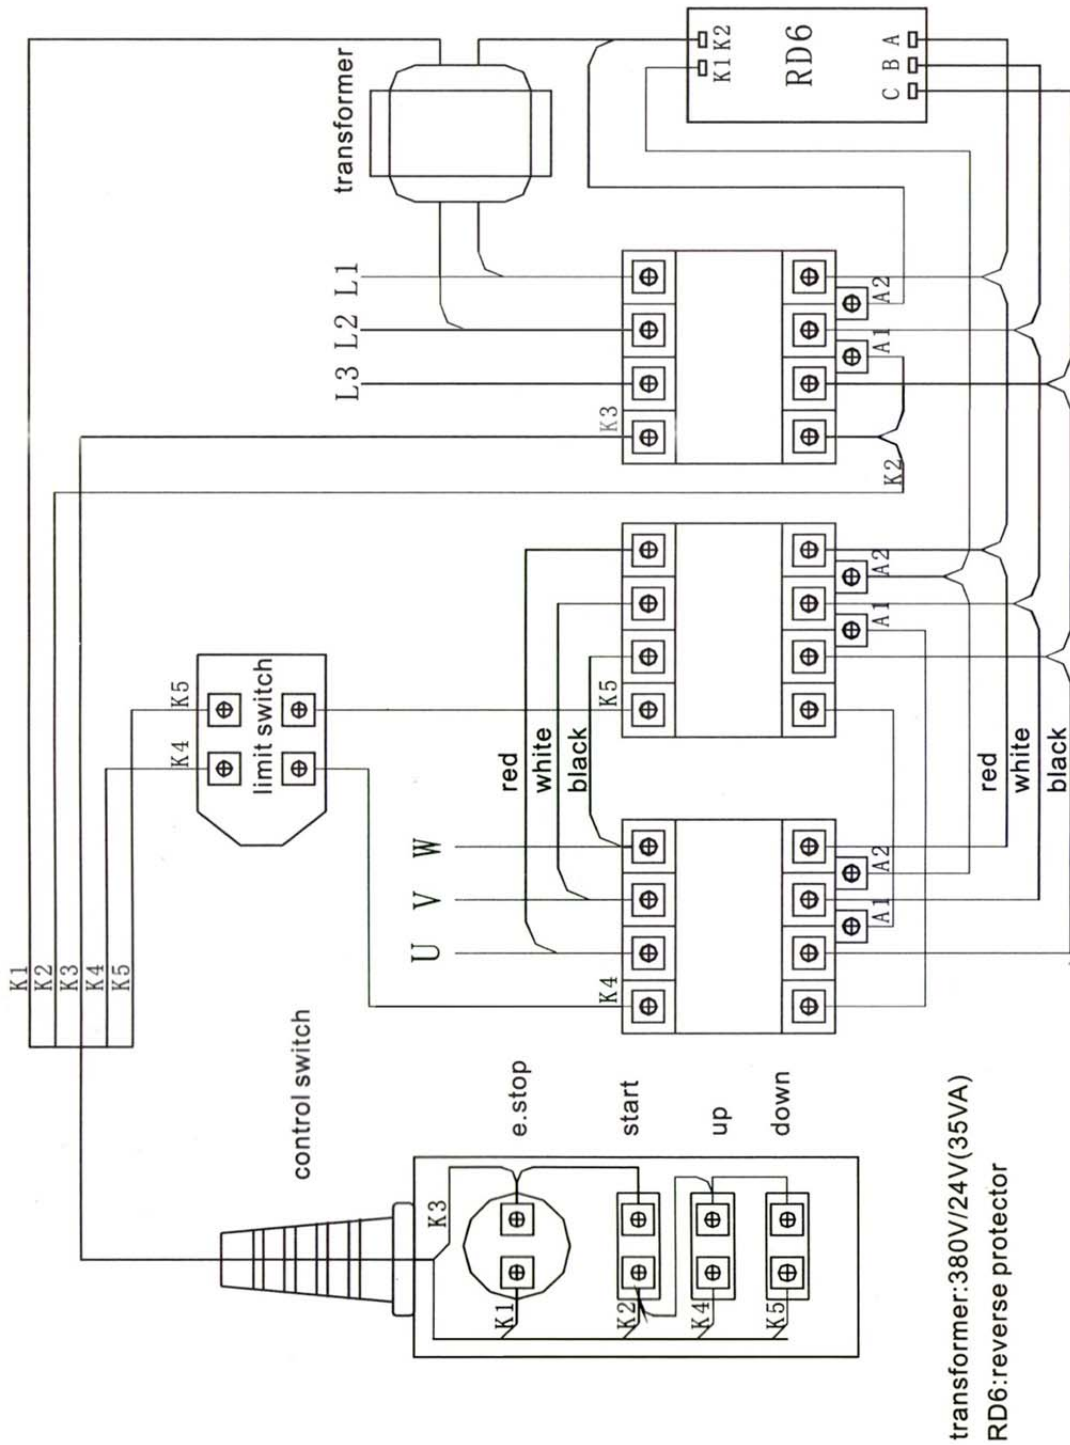


“e.stop” means emergency stop

(2) 4 directions wiring diagram for single speed

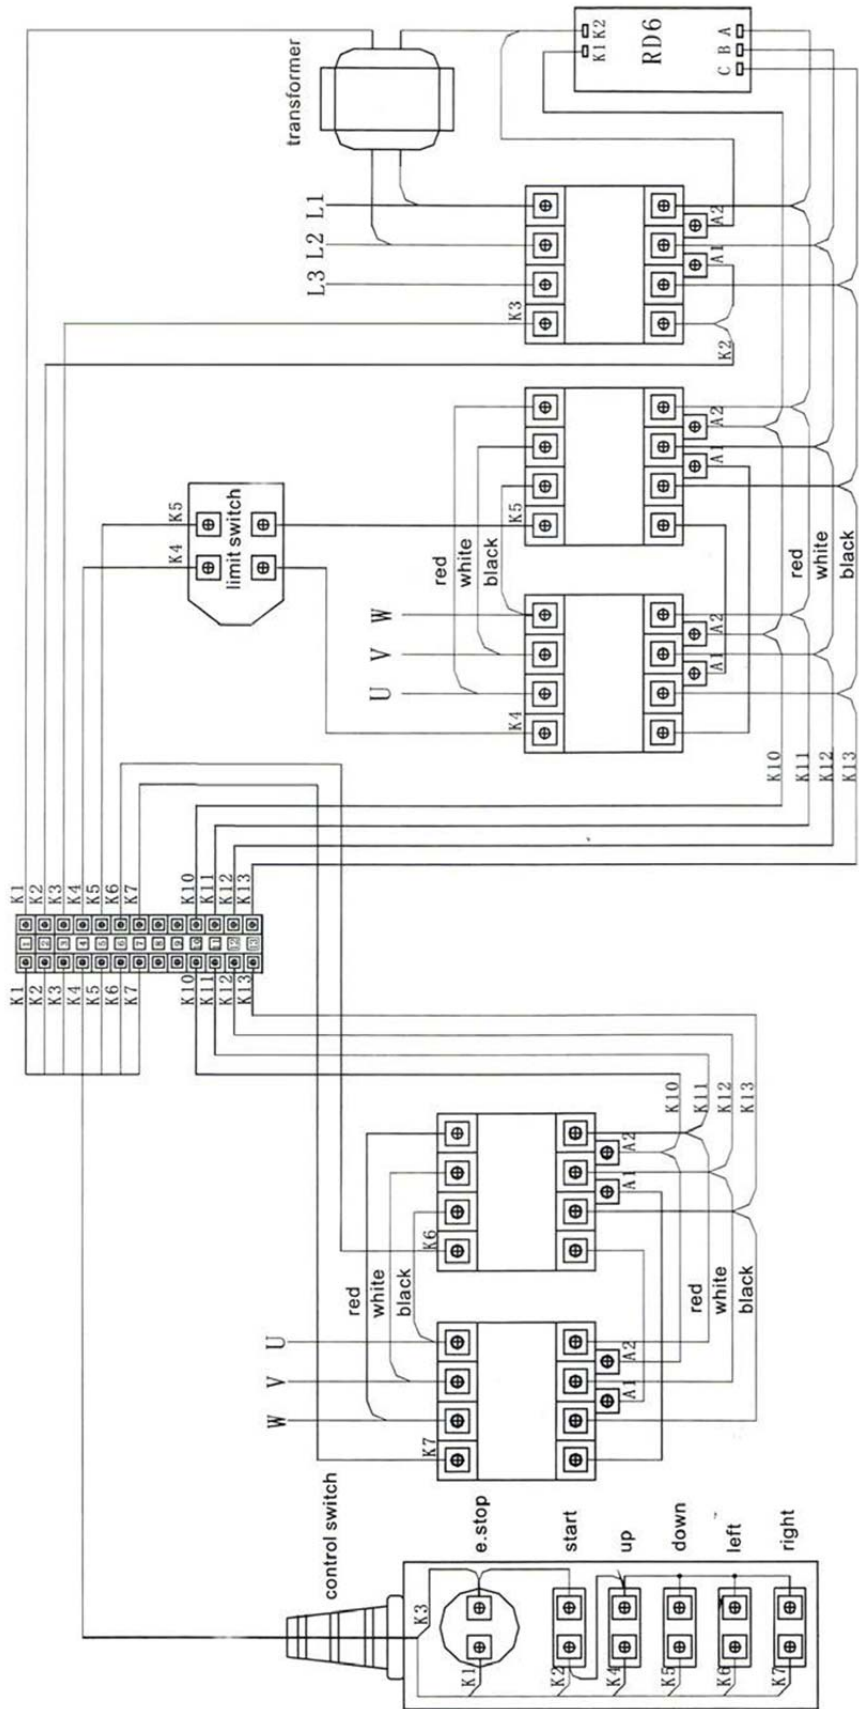


transformer:380V/24V(35VA)
RD6:reverse protector

(3) 6 directions wiring diagram for single speed

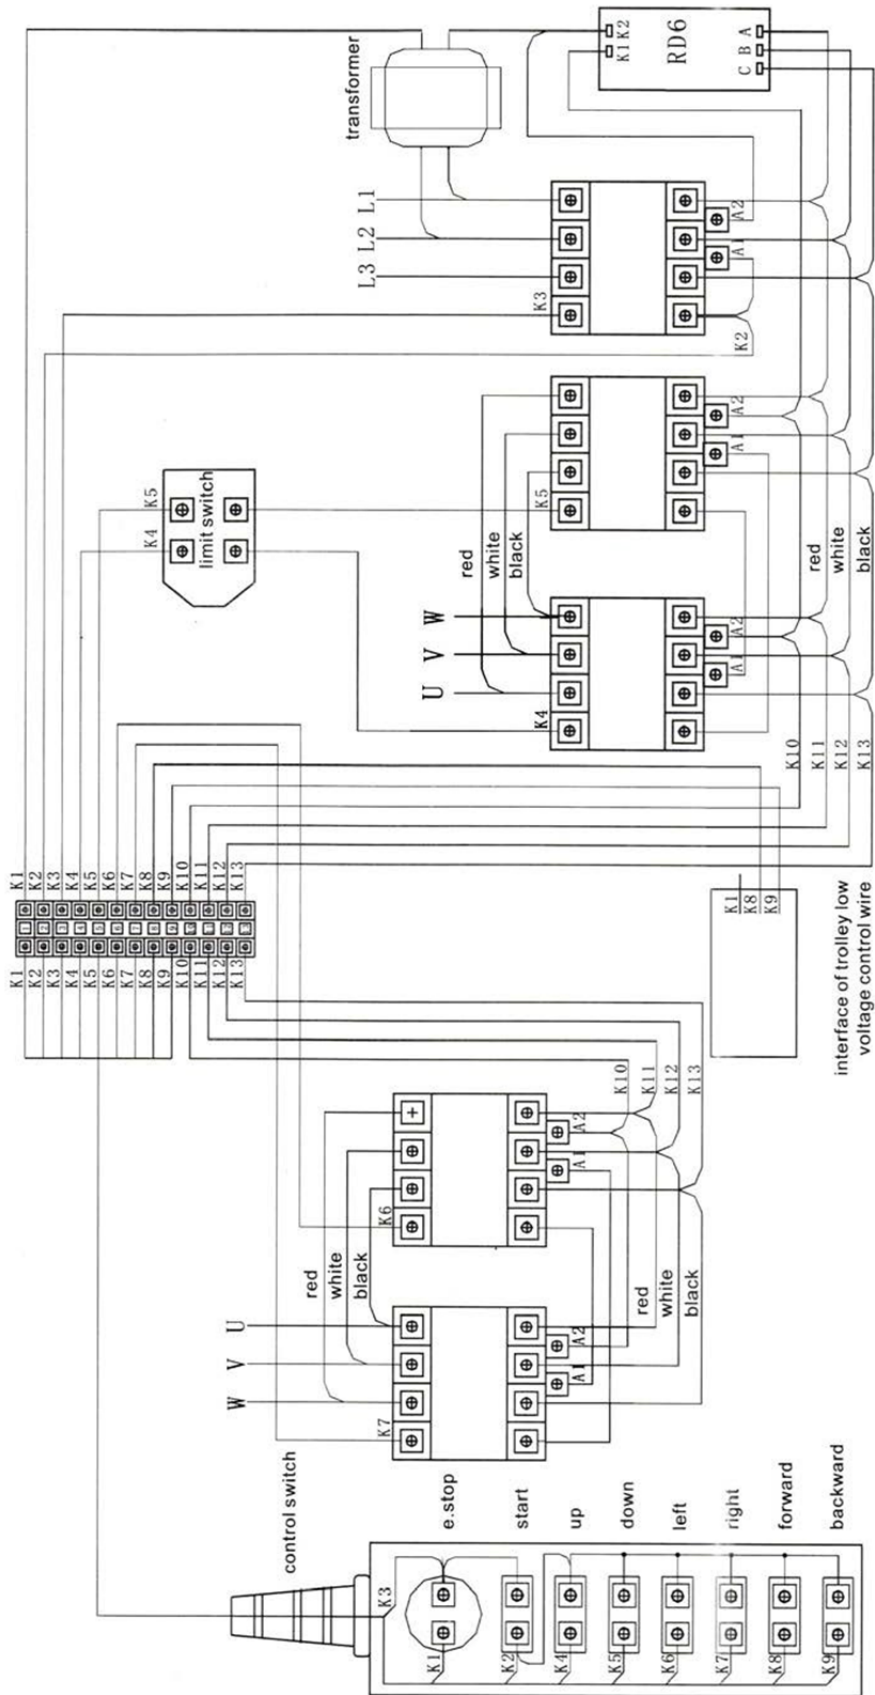


transformer:380V/24V(35VA)
RD6:reverse protector

(4) 2 directions wiring diagram for double speeds

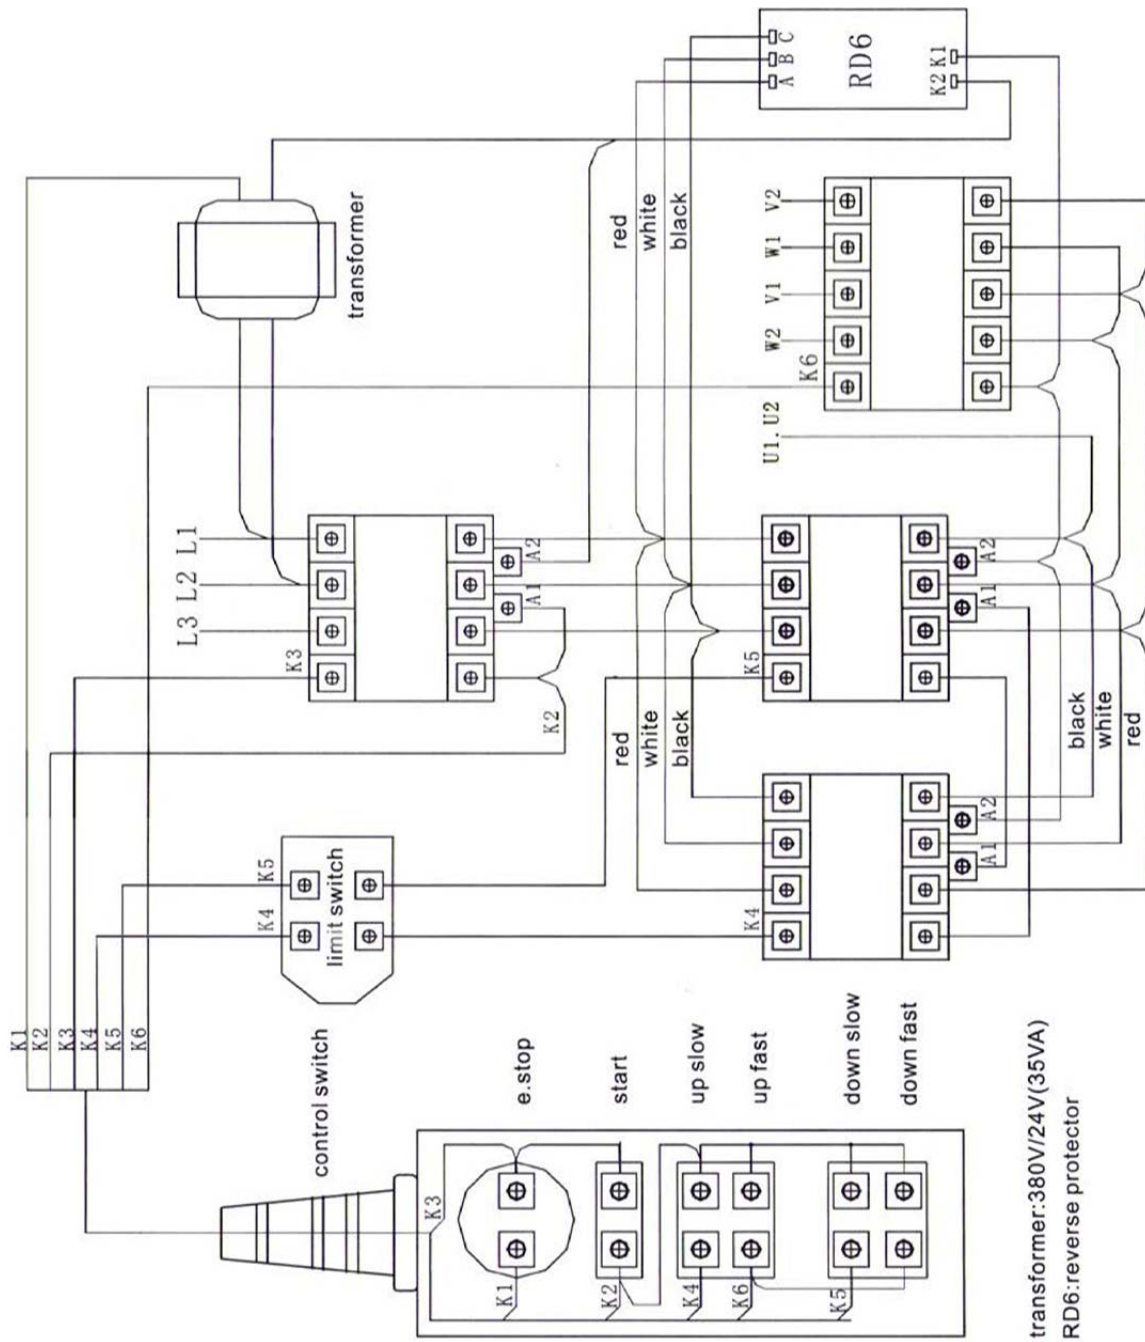


ELECTRIC CHAIN HOIST

(5) 4 directions wiring diagram for double speeds

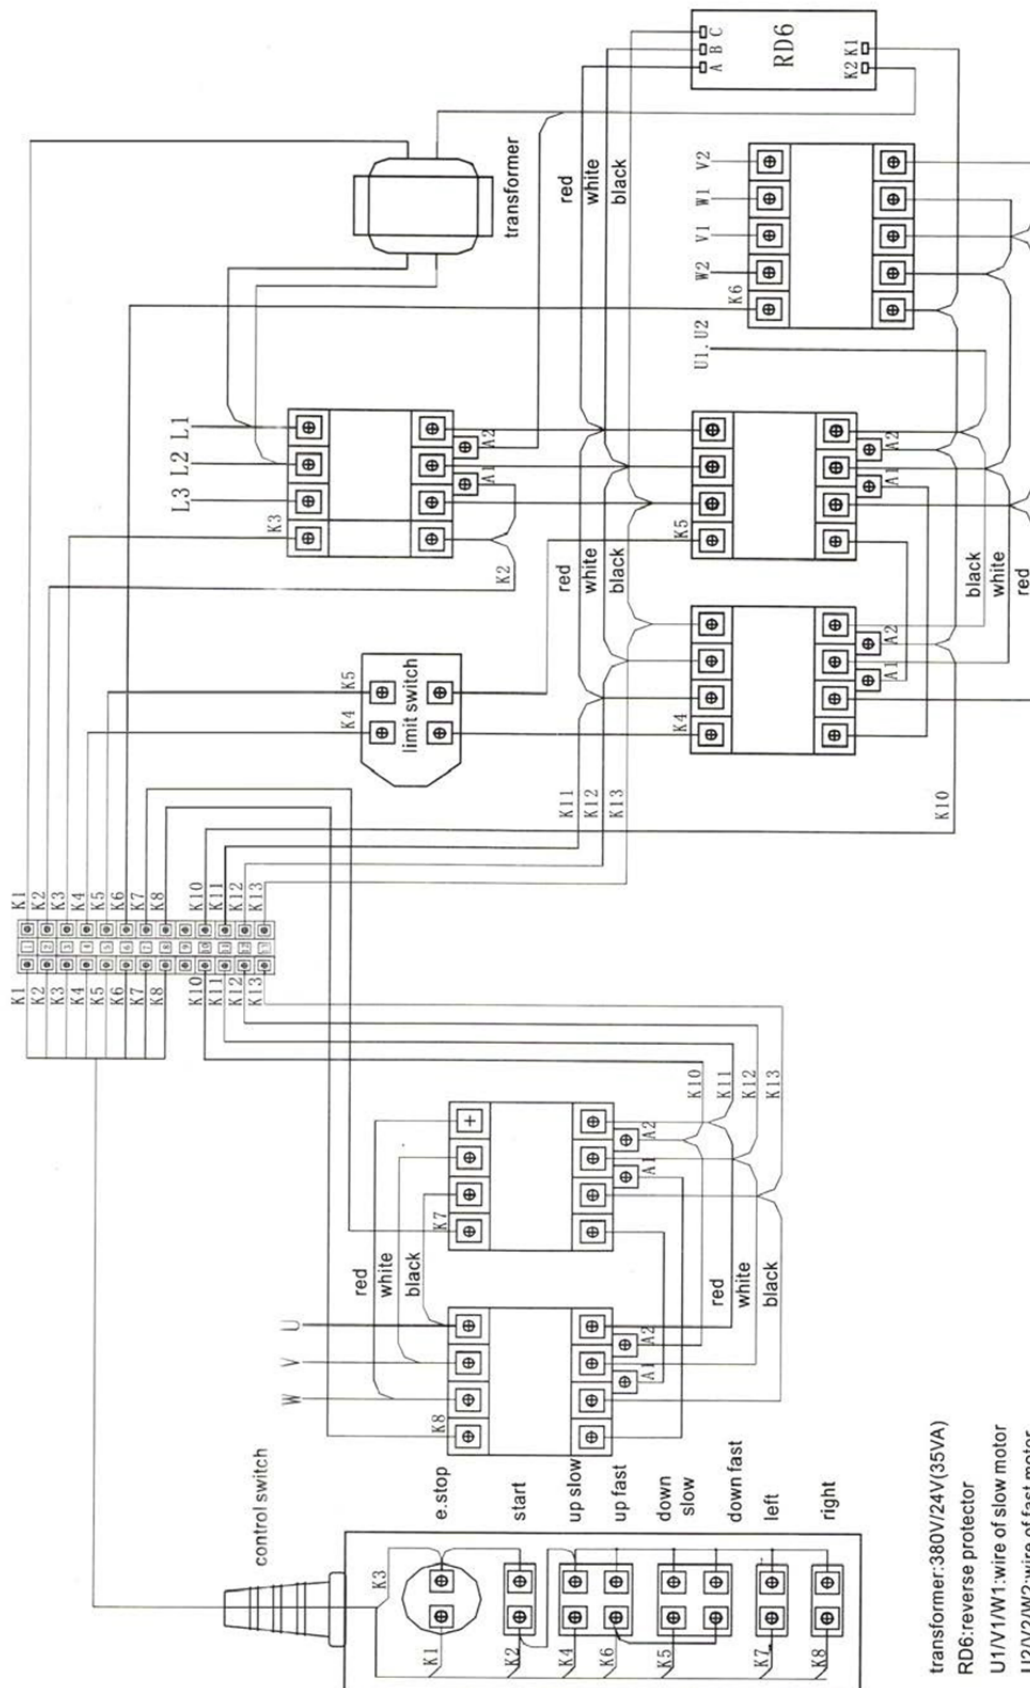


(6) 6 directions wiring diagram for double speeds

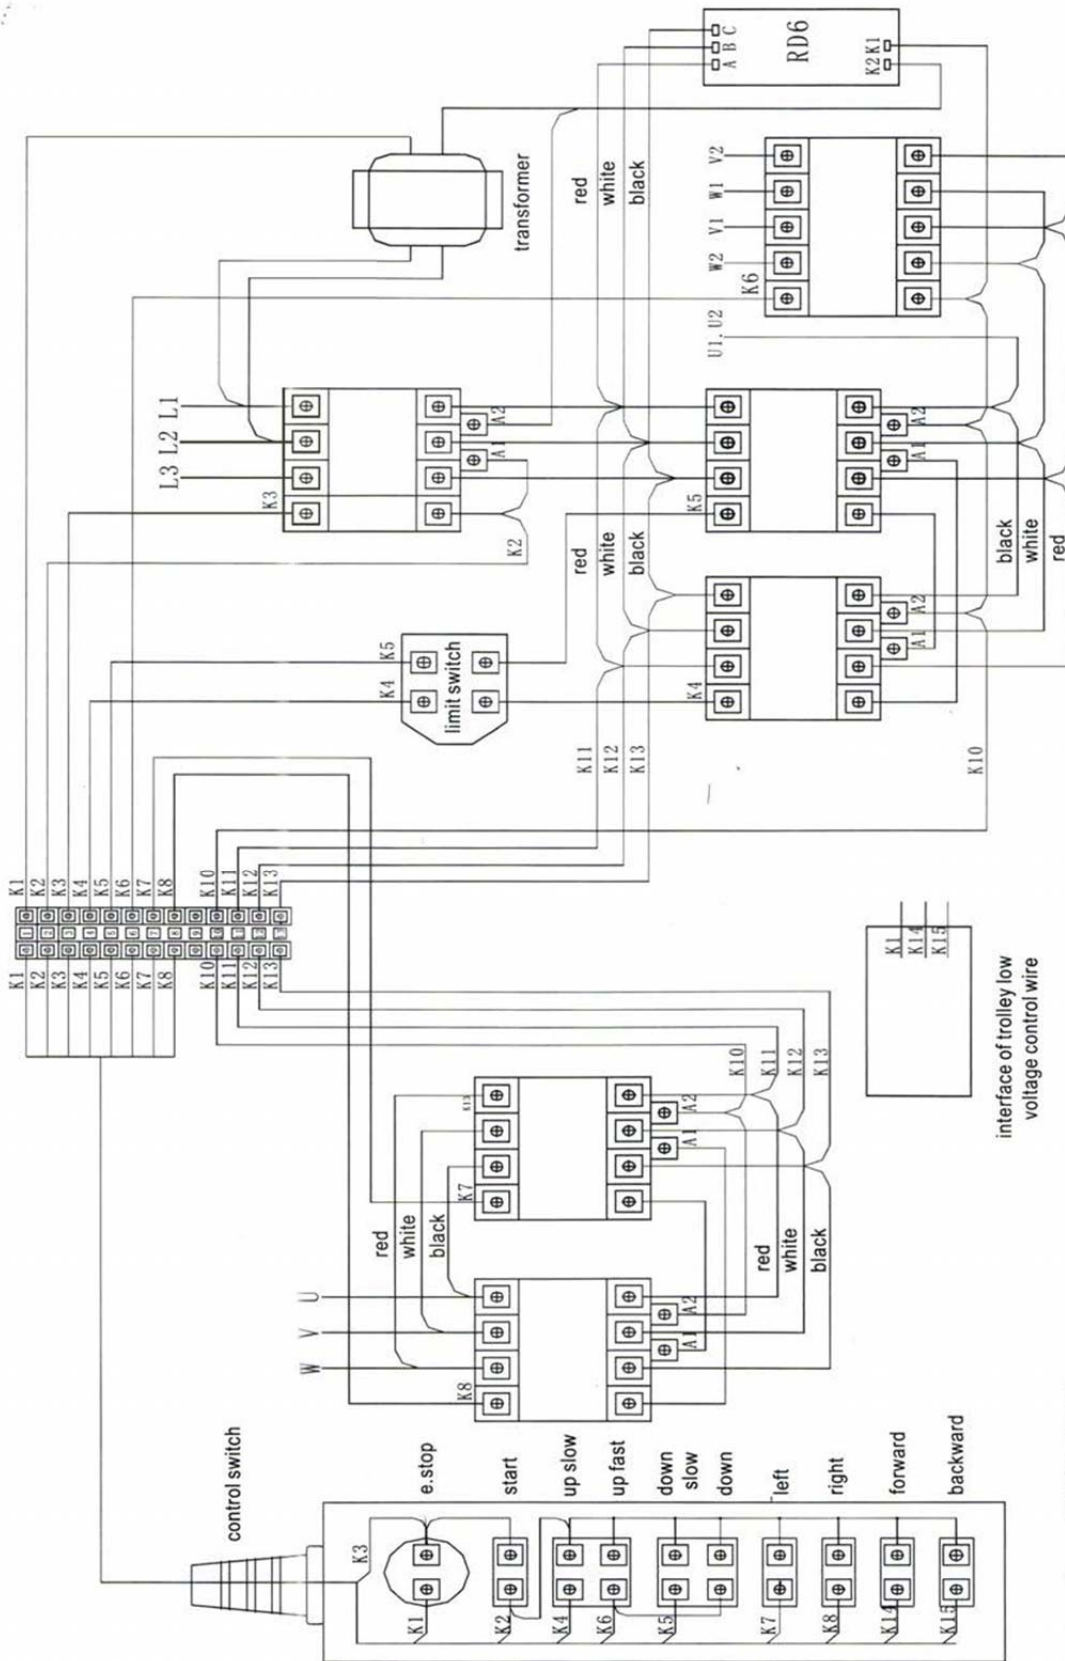

transformer:380V/24V(35VA)
 RD6:reverse protector
 U1/V1/W1:wire of slow motor
 U2/V2/W2:wire of fast motor

(7) wiring diagram for single phase motor

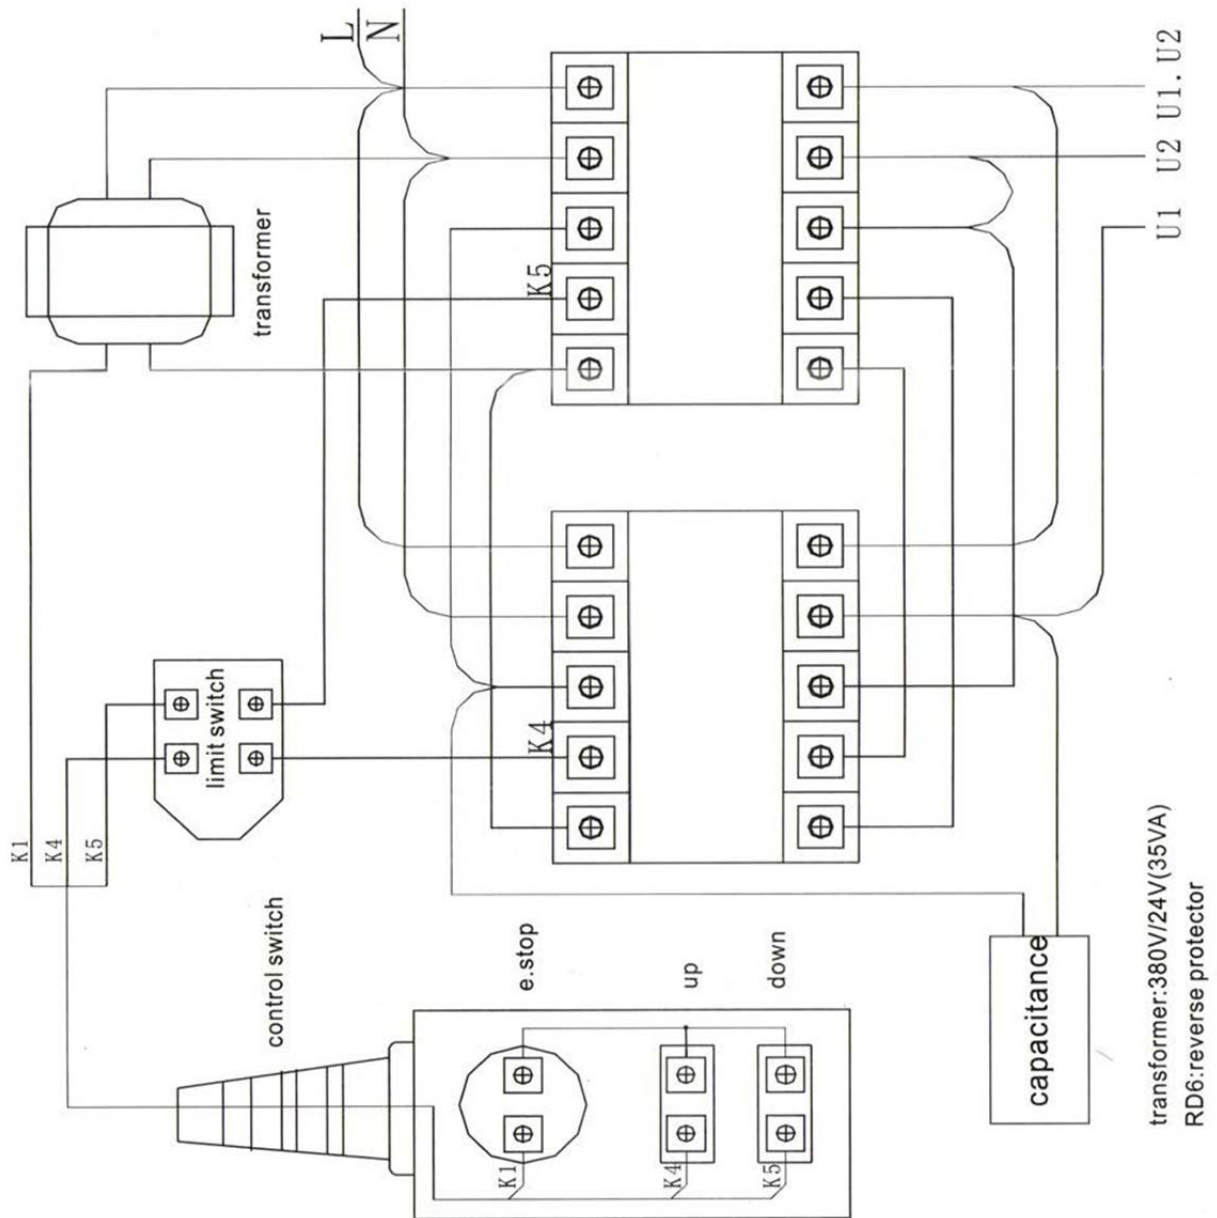

Reason of faults and inspection

Faults		Major Cause	Check Items	Remarks		
Can not operate in non-load state	Brake in soundless	Exceptional voltage	Power			
			Fault of operating circuit break-off, electric parts overburning	Powersupply		
		Inner wiring				
		Contactor				
	Transformer					
	Contactor is soundless	Up and down limit switch				
			Button switch			
		Contactor is soundable	Fault of power circuit break-off, overburning motor, brake	Motor		
Brake						
Inner wiring						
Contactor(junction fusing)						
Brake in soundable		Overburning of driving part's broken bearing	Gear, joint Bearing			
			Bearing			
Can operate in non-load state	Can not lift up (motor roar)		Default Phase (single phase operation)	Power		
				Feed power		
		motor				
			Contactor(junction fusing)			
Can lift up but very slow		Low voltage	Feed power			
Different reaction from the button	Different reaction from the button (inverse reaction from the button)		Anti-phase wiring	Feed power		
			Wrong wiring	Inner wiring		
				Button switch		
	No reaction after pressing the button		Wire break of operated circuit	Inner Wiring		
				Button switch		
			Fault of electric installation parts		Contactor	
					Up and down limit switch	
					Contactor	
					Brake	
					Feed power	
					Inner wiring	
					Button switch	
					Load chain	
	Load pulley, bare pulley					
			Gear, joint			
		Bearing				
Noise of brake	Running (grating)	Drag	Brake			
	Stop	Wear of friction plate	Brake			
abnormal noise of rail curve (grating)		Obstruction of orbit/wheel	Operation of trolley			

ELECTRIC CHAIN HOIST

Trouble description		Reason	Inspection Items	Remarks
Can not move in horizontal		Rail declining	Trolley movement	
	Electric trolley /manual trolley	Inclined pull (wheel is raising)	Trolley movement	
	Electric trolley /manual trolley	Gear occlusion problem	Trolley movement	
	Electric trolley /manual trolley	Brake fastening	Trolley movement	
	Electric trolley	Electric faults	Trolley movement	
Move at "S" way and along with abnormal noise	Electric trolley /manual trolley	Rail & wheel's interference	Trolley movement	
		Side wheel lack oil		
		Wheel uneven wear		
		Wheel deformation		
		Rail deformation, wear		
		Bearing aging		
		Brake wear		
Hook		deformation	hook	
Load chain		Wear, extension, deform	Load chain	
Electric shock once touching the machinery body or control switch		Imperfect earth, cable break-off	Electric Hands	
The hoist can not operation in non-loaded state	Brake is not soundable	Supply power voltage	Supply power voltage	
		operating circuit break-off, electric parts overburning	Cables	
			Wiring inside the device	
			Transformer	
			Electrical relay	
			Limit switch	
	Push-button switch			
	Braking interval too large or small.	motor		
		Brinking		
	Tripping as motor too heat	Thermal protector		
Brake is soundable	Bearing burning out, driving component wearing	Gear, top sub		
		Bearing		
Load operation slow but work	Voltage drop	Feed cable		
Low speed status operation; High speed status did not operation or work slow	Low voltage	Supply power		
	Voltage drop	Feed cable		
The movement did not coincident with as switch button	The movement did not coincident with as switch button	Motor wires inverse	Motor	
		Connection Error	Wiring inside the device	
	Push-button switch			
	Operation all the switch button, the hoist did not work	operating circuit break-off	Wiring inside the device	
			Push-button switch	
Electrical installation fault	Limit switch			

ELECTRIC CHAIN HOIST

Trouble & Measures

Supply Power:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation	supply voltage abnormal	Check the power supply, when each phase voltage abnormality	power supply extraordinary	Check the power supply regularly

Power Cable:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation	Wire break (2 or more)	Check the wire continuity,wastage and the pressure welding terminals, Repair or change the cable if abnormal	Strong force exerted	Firmly fixed on the cable support or other equipment
			Not use the anti vibration cable	Use the anti vibration cable in moveable parts
			Twisted,knotted	No twisted, no knotted
			Interference other equipment	Used the fixed cable in the case of
	Overburning (2 or more)	Check the cables, Exchange if it is overburning	Temperature rise caused by undercapacity	Adopt the proper cable
			Binding cable used	Do not use the bundle cable
Starting slow or No operation	Off-capacity	Check the suitability of the cable dia, replace the cable if the Dia is insufficient	Voltage drop caused by undercapacity	Adopt the proper cable
Opertiaon only in free load (Single-phase)	1 wire break or overburning	To refer to above break or overburning item		
The movment did not coincident with as switch button	Power line connection error	Replace 2 wire	Wiring assembly error	connecting wire as per wiring diagram

Motor:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation	Coil burning (above 2 phase)	Measure phase resistance value; change the motor if all the value is infinite.	Over-current caused by over-voltage, low votage	Operation under Rated voltage
			Over-current caused by over load	Operation under Rated voltage
			Beyond the short-term rating and intermittent cycle rating operation	Confirm the short-term rating, intermittent cycle rating, use in the rated value.
			Micro-Motion over, reverse braking operation (continuously add the starting current)	Do not over-operation

ELECTRIC CHAIN HOIST

			Over-current caused by daggling brake	Refer to brake
	leading wire break (above 2 phase)	Measure phase resistance value; change the motor if all the value is infinite.	leading wire break	Do not infibulate
			Vibration ,Drop	Avoid large bumping in using
Opertiaon only in free load (Single-phase state)	Coil burning (1 phase only)	Measure phase resistance value; change the motor if infinite value exist	hierarchival Short circuiting caused by wire low insulation	Do not mix foreign matter into the motor
	leading wire break (1 phase only)	Measure phase resistance value; change the motor if infinite value exist	leading wire break when assembly	Do not infibulate wires when assembly
			Vibration ,Drop	Avoid large bumping in using

Brake:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation	Braking Coil burning	Measure brake phase resistance value; change a brake if all the value is infinite.	Over-current caused by over-voltage, low voltage	Operation under Rated voltage
			Micro-Motion over, reverse braking operation (continuously add the starting current)	Do not over-operation
			Over-current caused by over load	Operation under Rated voltage
			Operation exceed short-term rating and intermittent cycle rating.	Confirm the short-term rating, intermittent cycle rating, use in the rated value.
			Over-current caused by operation in single phase state	As In the single-phase operation can not load lifting, please immediately turn off the machine and confirm the reason of singlephase.
	Friction plate waste (beyond brake magnetism)	Measure brakespace, replace one if the space is over the use limit	Over Micro-operation	Do not over-operation
	Brake wire break	make sure wire is connected, replace it when disconnect	leading wire damaged when assembly	Do not infibulate wires when assembly
	Brake wire insert terminal bad	Replace the insert terminal when it loose	Bad combination when assembly	Effective combination when assembly
	Rust	Replace a brake when insensitivity	unused in Humidity environment	use it regularly
			condensation	Pay attention when use it in the Highly temperature-changing environment
Friction plate waste	Measure brakespace, replace one if the space is over the use limit	Over Micro-operation	Do not over-operation	

ELECTRIC CHAIN HOIST

Inside wiring:

Condition	Reasons	Confirmation & solvement	Main occurrence reasons	Measurement
NO Operation	Break	Check the cable. Repair it when wire break	Vibration,drop	Avoid large bumping in using
			Leading wire damaged when assembly	Do not infibulate wires when assembly
		Check Connector, Repair it when wire break	Connector did not pressed well	Press it by the appropriate tool
	Wiring error	Refer to wiring diagram,properly connected	Wiring error	Refer to wiring diagram,properly connected
	Connector screws loose (overheat burning)	Fastening	Bad fastenting	Effective fastening
			Vibration,Drop	Avoid large bumping in using
Connector, insert terminal bad combination	Effective Combination	Bad combination when assembly	Effective Combination	

Transformer:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation (Contactor No operation)	Coil burning,break	Measure coli resistance value; Change a transformer if the value infinite.	Overvoltage	Operation under rated voltage
			Micro-Motion over, reverse braking operation (Continuously add starting current)	Do not over-operation
			Over-current caused by the contactor being not acting well	Refer to contactor items
	Vibration ,Drop	Avoid large bumping in using		
Wire break	Check leading wire,repair or change transformer if wire break	Vibration ,Drop	Avoid large bumping in using	

Contactor & electric reply

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NON-STOP	Junction welding, burn out	Star manual operation of the contactor, For contactor,Change one if continuous welding or burn out.; For Electric reply, Visual inspection of the Junction	Micro-Motion over, reverse braking operation (Continuously add starting current)	Do not over-operation
			Overvoltage	Operation under appropriate voltage
			Overcurrent cased by overload	Operation under Rated voltage
NO Operation	Coil burning	Measure coli resistance value; Change coli if the value infinite.	Micro-Motion over, reverse braking operation (Continuously add starting current)	Do not over-operation

ELECTRIC CHAIN HOIST

			Overvoltage	Operation under rated voltage
			Shaking caused by low voltage	Operation under rated voltage
	Moveable parts breakage	Star manual operation of the contactor, For contactor replaced it when the action is not smooth; For Electric reply, visual inspect if any broken parts	Vibration ,Drop	Avoid large bumping in using

Limit switch:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation (Contactor No operation)	Contact fused	Operate the limit switch, Check the continuity of contactor, replace it if the result is negative	Limit switch used frequently	Do not use limit switch frequently
	Wire break	Inspect the cable, change it if wire break or replace limit switch	Vibration ,Drop	Avoid large bumping in using
	Moveable part rusting (moveable part's recoverability is poor)	Check the movable part, like limit lever, Remove rusty or replace it if it getting adhesive.	Place up/down limit for long time	Don not be placed in up/down limit
Motor did not stop even reach in Upper and down limit	Contact fused	Operate the limit switch, Check the continuity of contactor, replace it if it can not stop	Limit switch used frequently	Do not use limit switch frequently
	Moveable part rusting	Check the movable part, like limit lever, Remove rusty or replace it if it getting adhesive.	Not using; use in moisture places more.	Regular Checking
	Wiring error	Reference to the wiring diagram, if the limit switch cable is properly connected, then that is the reverse	Wiring error	Properly connect the line as per wiring diagram

Push-button switch:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
NO Operation (Contactor No operation)	Emergency button is pressed	If the emergency button is pressed, Turn right the button to recover.	Forgot to recover the emergency button state.	Reading "Push-button switch operation guide" First
	Switch gear fault	Check whether the conduction contacts, replace the switch if it is off	Vibration ,Drop	Avoid large bumping in using
	Wiring break	Check if the button cable is correctly connected to the switching	Vibration ,Drop	Avoid large bumping in using
	Terminal screw loose	Tighten it when losing	Vibration ,Drop	Avoid large bumping in using
	Button cable wire break	Check if it breakover. Replace a cable or button cable when wire break	Cable coating damaged	
Cable forced caused by protection line			Install protection line	Firmly

ELECTRIC CHAIN HOIST

The action did not in accordance with display	Wiring error	Reference to the wiring diagram, if the limit switch cable is properly connected, then that is the reverse connection. Swap 2 wire power cords	Wiring error	Properly connect the line as per wiring diagram
Did not Stop even release button	Switch gear part bad restoring	Replace switch when it is not smooth.	Vibration ,Drop	Avoid large bumping in using

Electric shock:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
Electric shocked once touching machinery or control switch	Imperfect earth	Measuring earthresistance, Groundwire need to be assembled if the earthresistance below 100Ω	Groundwire	Groundwire connect firmly
			Groundwire bad conection	Assemble firmly to prevent screw
			Cable break	Do not apply excessive force on the cable
	Waterdrop	Clean drop first, using it after dry	Wet hands	Do not operation with wet hands

Hook:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
Hook mouth open	Hook deformation	Replace hook if the deformation beyond permitted range.	Overload	Operation under rated load
			Lifting (i.e.hook lift sth. connected with earth)	Do not lift ground object. Do not let the hook hooking the protrusion
			The load hanging on the hook head; hook is pull transversally	Lifting load with hook central
			Hanger suspension errors	Lifting angle must be controlled within 120 degrees
			Hanger size is inappropriate with hook	Using proper hook
Hook twist			Chain wrapped around the load	Do not wrap chain directly
Head part rotating rough	Bearing rust, corrosion	Hand rotation; maintain or replace if rotating rough	Inadequate of grease lubricant;corrosion caused by usage environment	Apply grease lubricant regularly; prevent the hook contamination of chemical reagent
	Bearing damage		Dust	Prevent foreign matter entry head

Load chain:

	Reasons	Confirmation & solvement	Main occurrence	Measurement
Chain twisted	bottom hook upturn	Restitute the hook state	Rotate the buttom hook once during working	Check the hook state before operation, when it is multiple

ELECTRIC CHAIN HOIST

	Chain twisted in Machinery	Remove the chain guide, load chain. Re-assembly it.	Improper assembly	Assembly properly
Limit swith sudden work when decline	Chain twisted or knot in Chain bag	Confirm the chain bag capacity (Chain bag nameplate), replace a larger one if capacity insufficient	Chain bag inadequate capacity	Confirm the lifting height and chain bag capacity first
Crackling sound	Change damage	Measuring wearing of the chain link diameter .Replace it when upto the wear limit	Operation under no grease lubricant long time	Apply grease lubricant regularly
spring's knocking sound (cracking sound)	the wear of link part	Measure the diameter on the wear ofchain, and replace when arriving at the wear boundary. (referring to P67)	excessive budge operation	Do not do the excessive operation
			overload	Used under the rated load
			pull inclinedly	Don't pull inclinedly
	extension of the pitch	Measure the pitch, and replace when exceeding the limit value.	The wear of load pulley and empty pulley	referring to the item of load pulley and empty pulley
irregular abnormal sound	The damage and deformation on chain surface	Replace it when obvious damage and deformation occur	use under the transition situation	Use under the models with multiple chain
	Mark of chain surface		Chain usies under the Distortions	Assemble Correctly
			strongly hit with other equipments	Pay Attention to the surrounding environment when use to avoid the collision
discoloration and lackluster surface	Rust, corrosion	Remove rust, daub lubricants,and replace when obvious rust and corrosion occurring	Lubricant exhausted	daub lubricating oil Regularly
			use under the rain environment	keep it under the indoor situation or places with ponchos
			influence by seawater and chemical reagent	please inform us if used in the special circumstances,and used correctly in the safeguard range

ELECTRIC CHAIN HOIST

Load chain fractured	Reaching service life	Check the chain, and replace the equipments which deviate from the specifications.	Mechanical life	operate correctly and manage properly including daily inspection, regular check.
----------------------	-----------------------	--	-----------------	--

Chain Wheel:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
The sound of DaDa	Wear of chain wheel	Check the wear degree on the chain wheel slot and load chain, and replace it if it badly worn.	long use under the condition with grease oil exhausted, and achieve using life	daub lubricating oil Regularly
			excessive budge operation	Do not do the excessive operation
			overload	Used under the rated load
			pull inclinedly	Don't pull inclinedly

Load pulley and empty pulley:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
spring's knocking sound (cracking sound)	Wear of pulley	Measure the slot edge thickness and load chain, and replace it if it badly worn.	long use under the condition with grease oil	daub lubricating oil Regularly
			excessive budge	Do not do the excessive operation
			overload	Used under the rated load
			pull inclinedly	Don't pull inclinedly

Chain Guide:

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
Shaking degree become bigger	Wear of chain guide and guide pulley	Measure the benchmark size and load chain, and replace it if it badly worn and exceeding the limit size.	pull inclinedly	Don't pull inclinedly

ELECTRIC CHAIN HOIST

Chain Wheel, Junction Part

Condition	Reasons	Confirmation & solvement	Main occurrence	Measurement
Couldn't lift loads	wear, breakage	Replace it when obvious wear or breakage occur	long time of use under the condition of insufficient lubricant	Abide by the change cycle of lubricating oil
			long time of use under the condition of insufficient lubricant (the joint part of motor shaft)	daub lubricating oil When inspect annually
Irregular operation	wear, breakage		Limit switch used too frequently	Don't use the limit switch too frequently

Bearing:

Condition	Reasons	Confirmation &	Main occurrence	Measurement
Couldn't lift loads	Sintering, breakage	Replace the bearing	Under the environment of high temperature or high frequency usage	Avoid to use under the environment of high temperature or high frequency usage
Abnormal sound	Aging	Replace the bearing		

Trolley:

Condition Reasons	Reasons	Confirmation & solvement	Main occurrence reasons	Measurement
Couldn't be drived because of the wheel skid	Rail tilt	Confirm the rail slope is within 1 °	Rail Settings is not good	Set up the orbit correctly
Couldn't be drived because of the wheel skid or cannot be drived is okineticly	oil adhere above the orbit wheel tread.	Clean the sundries	use under the environment with easy adherent sundries	clean the orbit regularly
friction sound when travelling on the curve track	The friction resistance between the wheel and rail	Daub the thin lubricating oil on the track tread of abnormal sound.		
Couldn't be drived on the curve track	interference of the curve track and trolley	Confirm that orbit curve's radius is minimal bending radius	used on the curve track of exceeding the limit value	Don't use on the on the curve track of exceeding the limit value

ELECTRIC CHAIN HOIST

Wheel rised and couldn't be driven	pull inclinedly (Wheel rised)		Operation method	Correct use
wheels stopped revolving	Gear's bite is bad	Remove the things between wheel and gear	Use environment	Confirm regularly
abnormal sound	The adjustment of adjust circle is bad	Confirm adjustment circle number and insert position	Insufficient confirmation	Install correctly
	Wear of wheel	Confirm wear degrees	The travelling surface has bump	Confirm regularly
	Deformation of wheel	Confirm the wheels' bending and surface damage	pneumatied device collided excessively, the travelling surface has bump	Replace and use correctly
	aging of wheel bearings	confirm whether gu long gu long sound exist when the wheel rotates	Reach service life	Replace
	the deformation and wear of track	Confirm rail wear and deformation	Overload or reach service life	Replace and use correctly

Electric Trolley:


Condition Reasons	Reasons	Confirmation & solvement	Main occurrence reasons	Measurement
wheels stopped revolving	Brake gelling	open the motor cover, and remove rust and dirt	Use environment	Confirm regularly
	electric fault	Refer to the items of electric chain hoist		
abnormal sound	wear of edge guide wheel	Confirm wear degrees	Reach service life	Confirm regularly
	Wear of friction slices	Confirm wear degrees of friction slices	Reach service life	Confirm regularly

Manual Trolley:

Condition Reasons	Reasons	Confirmation & solvement	Main occurrence reasons	Measurement
Hand chain couldn't be moved	the bite between hand wheel and hand chain is bad	Hang the hand chain right up on the hand wheel	Acuteness operation, etc	Replace the worn components with deformation

ELECTRIC CHAIN HOIST

Structure of electric chain hoist and its parts' details

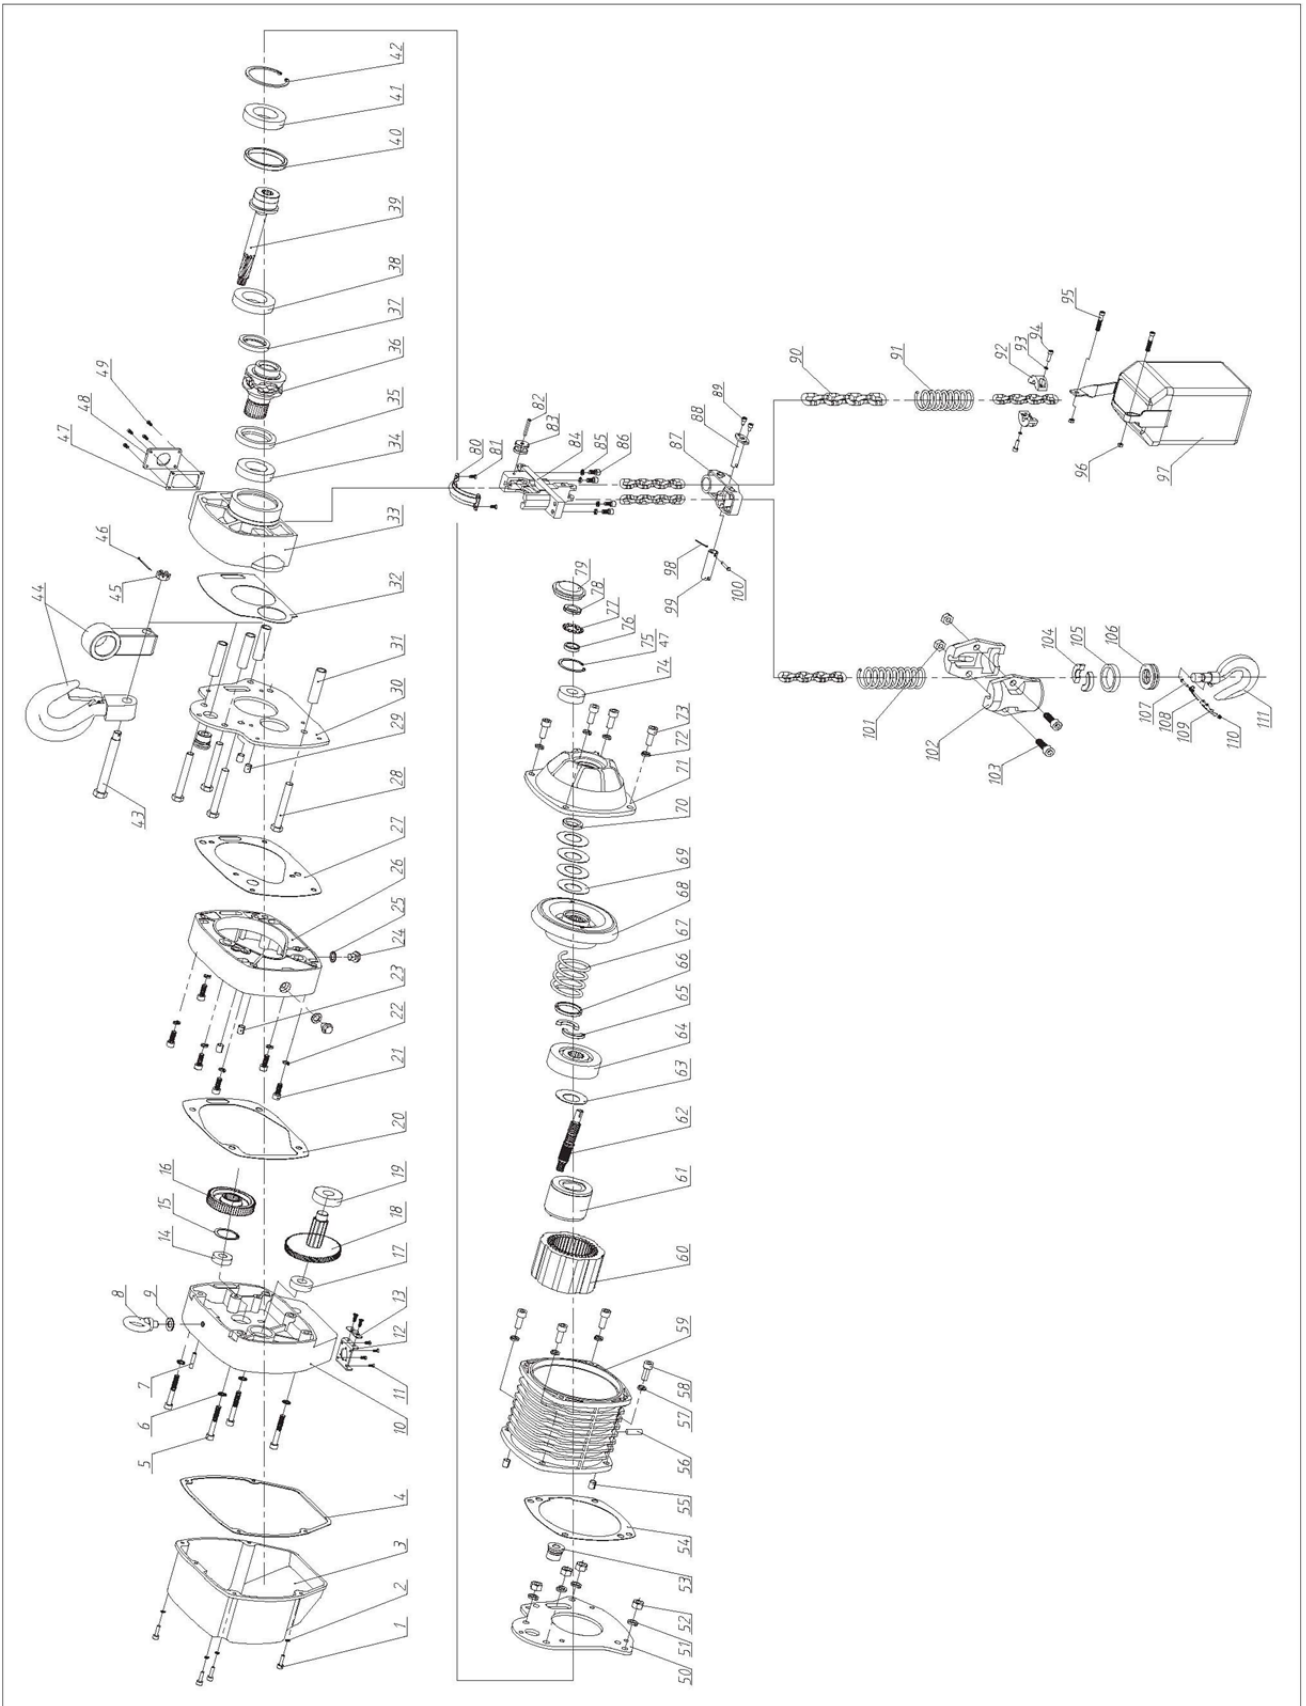

ELECTRIC CHAIN HOIST

S/N	PART NAME	QTY	REMARK	S/N	PART NAME	QTY	REMARK
1	Hexagonal circular bolt	4		36	chain wheel	1	
2	spring gasket	4		37	Oil seal	1	
3	gearbox base cover	1		38	Deep groove ball bearing	1	
4	Gasket of gearbox base	1		39	Output shaft assemble	1	
5	Hexagonal circular bolt	4		40	Bearing fixed ring	1	
6	Serrated gasket	4		41	Deep groove ball bearing	1	
7	gearbox base cover pin	1		42	Internal circlip	1	
8	Lifting eyebolt	1		43	Hexagonal bolt	1	
9	lifting eyebolt gasket	1		44	Ring	1	matched by choose
10	gearbox	1			up hook assembly	1	
11	Notch countersink bolt	6		45	Slotted hex nuts	1	
12	wiring fixing ring	1		46	Cotter pin	1	
13	wiring fixing ring fittings	1		47	side cover gasket	1	
14	Deep groove ball bearing	1		48	side cover	1	
15	Washer on shaft	1		49	Haxagonal circular bolt	4	
16	Output gear	1		50	Base plate of motor	1	
17	Deep groove ball bearing	1		51	spring gasket	4	
18	Gear-gear shaft	1		52	Nut	4	
19	Deep groove ball bearing	1		53	Bushing	2	
20	Gearbox gasket	1		54	Motor case gasket	1	
21	Hexagonal circular bolt	6		55	Fitting pin	2	
22	spring gasket	6		56	Hexagonal awl bolt	1	
23	Fitting pin	2		57	spring gasket	4	
24	Hex bolt	2		58	Hexagonal circular bolt	4	
25	Hex bolt gasket	2		59	Motor case	1	
26	Middle pieces	1		60	motor stator	1	
27	Middle pieces gasket	1		61	motor rotor	1	
28	Panels bolts	4		62	motor axle	1	
29	Fitting pin	2		63	disc spring	1	big
30	gearbox base plate	1		64	guide block	1	
31	Connection joint	4		65	Two-piece ring	2	
32	connection box gasket	1		66	Fixing ring	1	
33	connection box	1		67	Brake spring	1	
34	Deep groove ball bearing	1		68	Brake assembly	1	
35	Oil seal	1		69	disc spring	4	small
				BOM			
SYM	INT.	CHANGE NO.	DATE	SIGN		DWG.SYM.	
DR		INSP.	APP.				

ELECTRIC CHAIN HOIST

S/N	PART NAME		QTY	REMARK	S/N	PART NAME		QTY	REMARK
70	Rotor gasket		1		105	Hook Fixing Ring		1	
71	End cover of motor		1		106	Mono directional ball bearing		1	
72	spring gasket		4		107	Cross recess head screw		1	
73	Hexagonal circular bolt		4		108	Hook spring		1	
74	Deep groove ball bearing		1		109	Safety piece		1	
75	Internal circlip		1		110	Hexagonal nut		1	
76	Upper gasket of the ring		1		111	Bottom hook		1	
77	Locking piece		1						
78	Screw cap		1						
79	Rubber cover		1						
80	Guide sheet iron		1						
81	Notch countersink bolt		2						
82	Pulley axle		1						
83	Guide pulley		1						
84	Chain guide		1						
85	spring gasket		4						
86	Hexagonal circular bolt		4						
87	Guide bracket assembly		1						
88	Stop pin assembly		1						
89	Hexagonal circular bolt		2						
90	chain		7pcs						
91	Limit spring		2						
92	chain limit ring		2						
93	spring gasket		2						
94	Hexagonal circular bolt		2						
95	Hexagonal circular bolt		2						
96	Hexagonal Nut		2						
97	chain bag assembly		1						
98	Cotter pin		1						
99	Connection shaft of limit switch		1						
100	Pin roll		1						
101	Hexagonal Nut		2						
102	Single back-hooking case		1						
103	Hexagonal circular bolt		2						
104	Hook Two-piece Ring		7pairs						
					BOM				
SYM	INT.	CHANGE NO.	DATE	SIGN		DWG.SYM.			
DR		INSP.	APP.						

3.5 Maintenance Information Table of Hoist

The following forms filled by the user:

<p>Company:</p> <p>Date:</p> <p>Address:</p>
--



Electric Chain Hoist Inspection Records

Attach annual inspection record form

No.	Inspection Item	Inspection Result	Inspector	Date
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				